



Northern California Women's Gymnastics Association ProScore[®] Hardware Packing Instructions

- When setting up the system, test each network cable (6 conductor flat satin) with the line tester. Plug both ends of the wire into the main tester. One red light will light in position one on the right, followed by a red light in position two on each side, followed by a red light in position three on each side (this pattern will keep repeating). Only the right side will light up in position eight. You can also use the remote tester with the main tester if the ends are far apart. The lights on the remote tester will replace the lights on the left hand side of the main unit. DO NOT TEST WIRE THAT IS CONNECTED TO A PROSCORE[®] DEVICE!!**
- DO NOT CHANGE THE DIP SWITCH SETTINGS ON THE KEYPADS OR THE SCORE FLASHERS!**
- Use the attached Velcro cable tie to tie the coiled 6 conductor flat satin network cable after it has been neatly coiled (do not combine cables).**
- DO NOT WRAP THE POWER SUPPLY WIRE AROUND THE POWER SUPPLIES!!!!!! Use the attached Velcro cable tie!**
- Place one power supply, one junction box, and one serial cable in one Ziploc[®] bag and place the other junction box, one power supply, and serial cable in another Ziploc[®] bag.**
- Place the other four power supplies in one Ziploc[®] bag.**
- Place the four small extension cords in one Ziploc[®] bag.**
- Place the line tester, the wire cutter, the screw driver, the crimping tool, the tweezers and the baggy of modular connectors in a Ziploc[®] bag.**
- Place the eight scoreboard mounting brackets in a small Ziploc[®] bag and leave the eight screws that attach them to the scoreboards in the scoreboards.**
- Place the keypad skid pads in a Ziploc[®] bag.**
- CHECK THE INVENTORY LIST TO MAKE SURE YOU HAVE EVERYTHING BEFORE YOU LEAVE THE MEET SITE!!!!**